



- 1 Open browser and enter the gateway IP address. The default IP address is **192.168.1.1**
- 2 Log in to the router. The default admin username and password is admin/admin. Select Login.

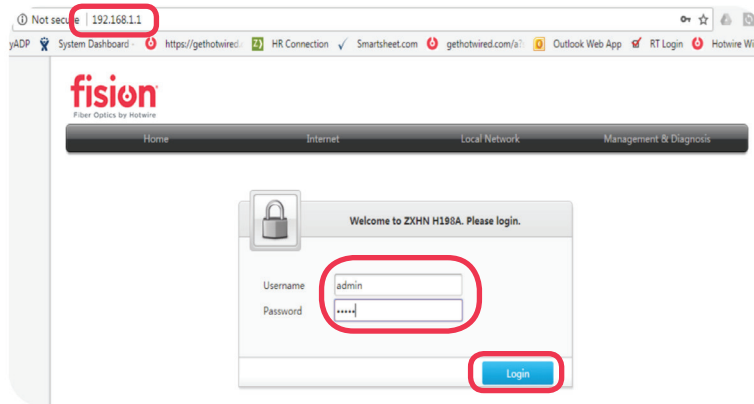

- 3 Select the Management & Diagnosis tab
- 4 Select Account Management
- 5 Enter the old username and password
- 6 Enter the new password in both fields
- 7 Select Apply

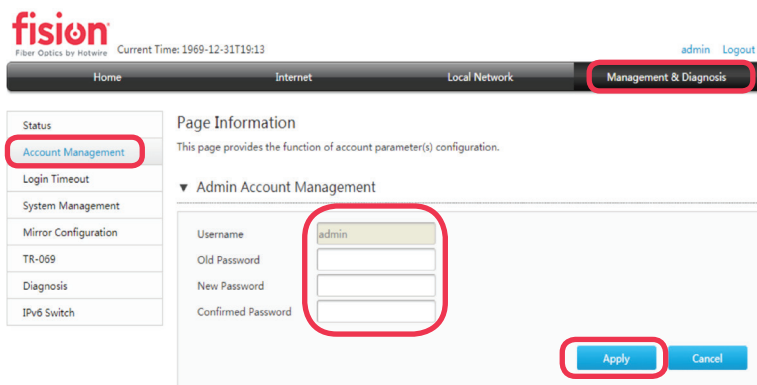

It is imperative that you document and keep the new administrator password in a safe place. Hotwire Communications will not have a record of your new password.